



500412 TORQUE CONVERTER LOCKUP SWITCH UPDATE KIT INSTALLATION

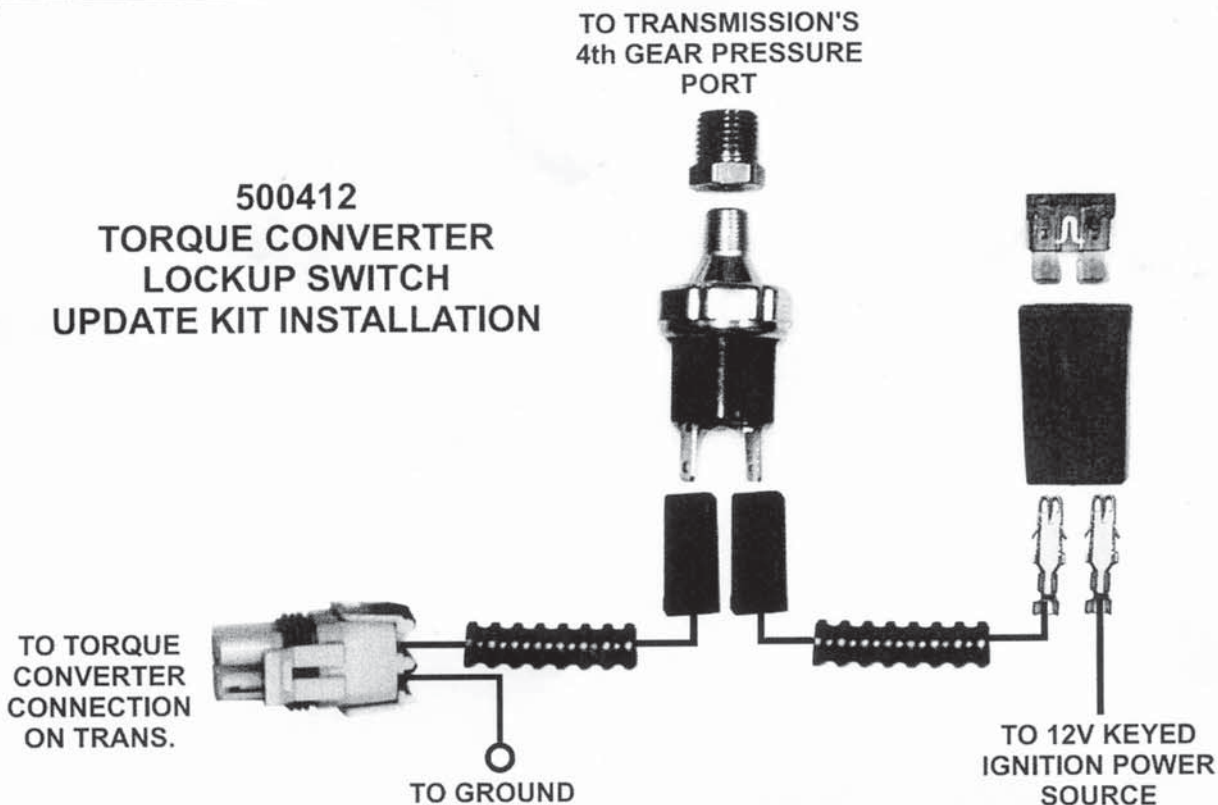

IMPROVED EXTERNAL LOCK-UP KIT

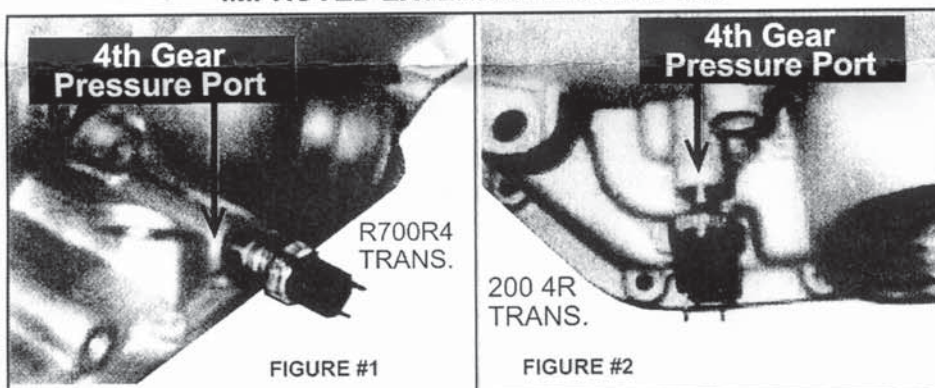

INSTALLATION INSTRUCTIONS

1. Locate and remove the 1/4" pipe plug from the 4th gear pressure port (shown in figure #1 & figure #2).
2. Install oil pressure switch provided with this kit into pressure port using the brass bushing as needed. Use a good Teflon sealer to prevent leaks. (a 90 degree adapter may be used).
3. Plug the white case connector supplied in this kit into the matching connector on the driver's side of the transmission.
4. Run the Red wire hooked to the connector plug over to EITHER TERMINAL on the oil pressure switch.
5. Run the other Red wire from the second terminal on the oil pressure switch into the body of the car, to be connected to a 12 volt keyed ignition power source, with the 20 amp fuse supplied in this kit, between the fuse box and the oil pressure switch. (Check voltage source with a volt/ohm meter).
6. Ground Black wire from the connector to the frame of the car.

500412

Instruction Sheet # INS8155 rev. 10/06