
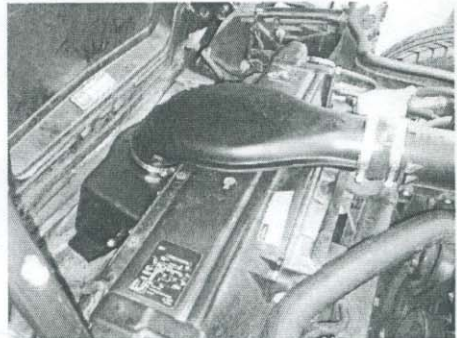


C4 1985-1996 Vortex Ram Induction System

Please read the instructions completely and make sure you understand them before starting your install.

1. Remove your stock airbox
2. Take the supplied template and place it on your shroud. Center it on your shroud and with the bottom legs just touching the crease in the shroud on the bottom.
3. Take a crayon or marker and trace around the template.
4. Remove the template and proceed to cut the marked area. Be careful of the fan and condenser on the other side. Run your cut along the bottom section and cut through the legs. View picture.
5. Set the box over the opening and mark the holes for bolting down. Now remove the box and drill the holes.
6. Insert the u-clips provided into the 2 bottom holes.
7. Now take your filter pass it through the box and attach it to the supplied powerduct.
8. Place the complete unit in the car. Start by screwing in the 2 bottom screws into the u-clips.
9. The remaining would be the nuts and bolts to secure the box.
10. Connect your MAF to the powerduct and you are done.

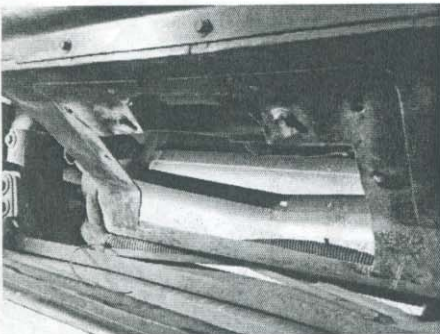

Breathless Racing Team
2070-G Tigertail Blvd
Building 2
Dania, Fl 33004
954-925-7725